

DRESSED EDGE (Stretcher Bond)




Joint Width; The Dressed Edge collection has been designed to be installed with a 8-12mm mortar/grout joint. When applying the stones use timber or plastic dowels/wedges to keep the joints evenly spaced. Due to the nature of the product stones will vary in size and may need extra wedges to allow for height variation. An attractive look can be achieved by dry stacking the product, If dry stacking it is important to cut stones that vary in height to allow a tight, level fit.

Installation tips;


- If your application requires corners, apply these first.
- After corner pieces have been applied, apply the bodies 1 layer at a time, working towards the edge.
- Colour, size and texture variation is an essential aspect of a natural looking stone wall. Select stone from different boxes and lay out across your job site to ensure you gain this look. The visual effect will be enhanced by an overall natural mixed presentation.
- The Dressed Edge collection can be cut or trimmed using a wet saw, angle grinder with diamond blade attached or hammer & bolster.
- Check levels every 300-400mm with a spirit level or draw a chalk line.
- Orders will be packed as a mixed % ratio (30% 230+350mm) (30% 590mm) & (40% 470mm)

Sizes are approx: Height; 240mm

Length; 230mm, 350mm, 470mm, 590mm

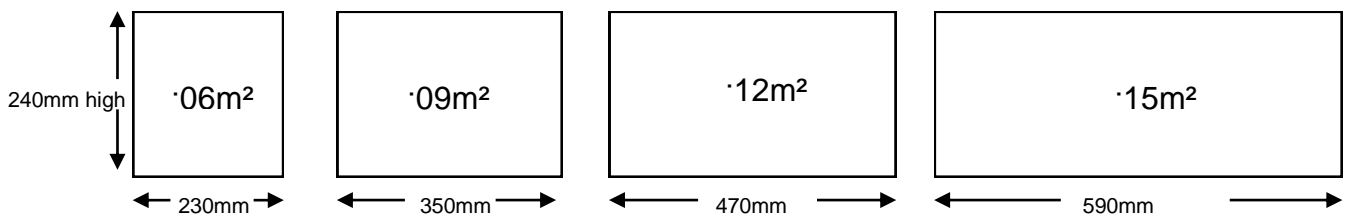

Sample Installation pattern – like brick work, avoid straight vertical lines when applying the stone

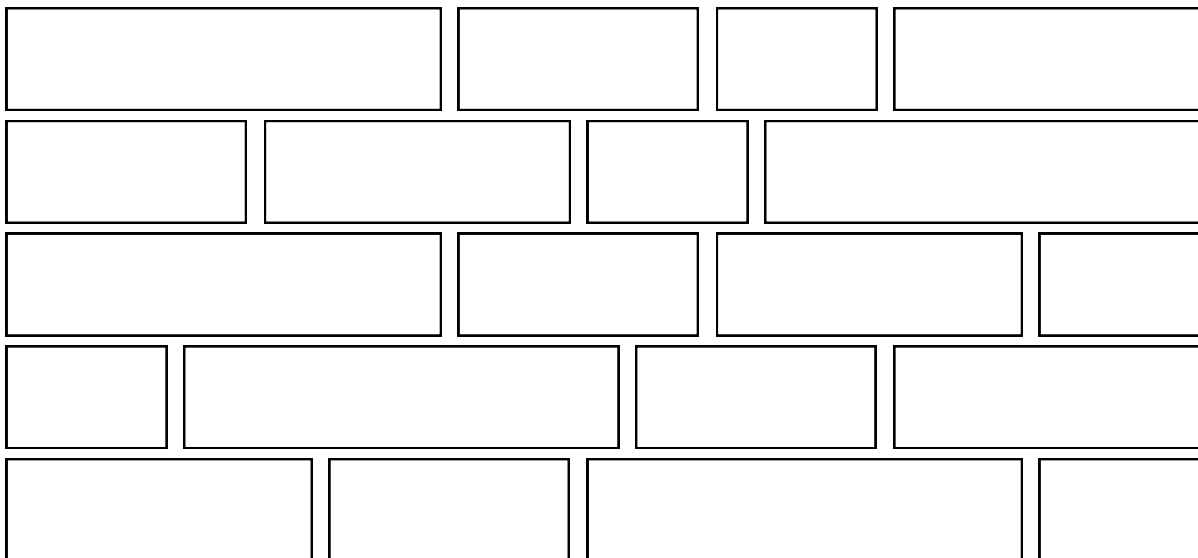

Joint: Pointing mortar or tile grout can be used to fill the joints. One of the easiest & fastest ways to fill the joints is with a piping gun or piping bag. Purchase your silicon piping bag from Veneer Stone by calling 1300984572 or email info@veneerstone.com.au

To retain the original fresh quarried look we suggest sealing the stone. If you would like the stone to mellow slightly and gain the European look after years of harsh weathering don't seal the product.

For more information visit our website at www.veneerstone.com.au or call 1300 984 572