Veneer Stone




Coastal Collection Technical Guide Inspired by Native Australian Stone

Contents

Colour Selection	02
Gallery	04
Benefits	06
Product Specification	08
Installation Guide	10



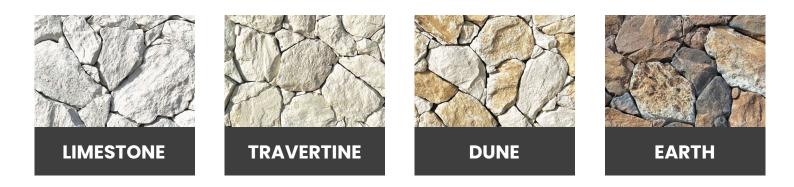





Commonly blended colours for a contrasted finish are: Limestone & Travertine Sandstone & Natural Grey Earth & Bluestone

The product colours in this booklet are as accurate as current photography & printing techniques allow. We suggest you look at actual samples for a better idea and selection.



COASTAL

Capturing the essence of the Australian coastline, our Coastal Collection is a manifestation of rustic and timeless appeal. Handcrafted painstakingly together the stone gracefully embraces its space with its distinct texture details and colour variations.



The product colours in this booklet are as accurate as current photography & printing techniques allow. We suggest you look at actual samples for a better idea and selection.



The product colours in this booklet are as accurate as current photography & printing techniques allow. We suggest you look at actual samples for a better idea and selection.











Maintenance



Our Coastal Collection comes in a diverse range of colours. It is perfectly suited for fireplaces, poolsides, facades, retaining walls and more. Taking inspiration from the Australian coastline, our Coastal Collection seamlessly blends with the environment. We are proud of our Australian heritage, all of our collections are made in Australia specifically for Australian consumers.

COASTAL


All weights and measurements are approximate.



Estimating Stone Required

When installing with dry joints (dry stacked) add an extra 10-15% to allow for extra cuts and wastage.

BODIES: Calculate the total surface area by square metre

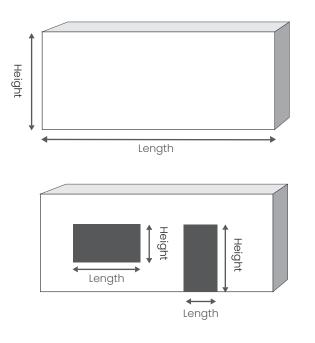

CORNERS: Calculate the lineal metres of corner stones required by measuring all external corners from top to bottom.

Please note 1 lineal metre of corners equates to approximately 0.2 m2 of surface area (deductible off bodies).



Length of corners required

Veneer Stone estimation calculator www.veneerstone.com.au/calculator

Random Shade Variation

Extreme colour and texture variation will occur from piece to piece and within each batch for a random look. The look of the final installation will be unique. Please review the range of products before making your final selection.

Approximate Weights

	Bodies	Corners
Coastal Range	50-65 kg/m2	13 kg per L/m

APPLICATION

Suitable for interior and exterior walls, Veneer Stone can be installed around fireplaces, though no closer than 20" to a naked flame. Veneer Stone can also be installed around wet areas, however, continued exposure to chlorine and other chemicals may eventually affect the colouration of the products. When frequently exposed to water, we recommend protection with Ven Seal Ultra WB sealer.

CORNERS: There are approx. 10 Different shapes and sizes, and each box contains a mixture of:

Short Return Range: 70 - 180mm

Long Return Range: 95 - 280mm

INSTALLATION


Joint Width: The Coastal collection has been designed to be installed with either a dry joint or an 8 - 20mm mortar/grout joint. When applying the stones use timber or plastic dowels/wedges to keep the joints evenly spaced. Due to the nature of the product stones will vary in size and may need extra wedges to allow for height variation.

Dry Joint Installation Tip: If installing with dry joints please ensure either the wall or adhesive are a dark colour before starting. This can be done by purchasing a dark tile adhesive or tinting mortar with black oxide (check with your local glue supplier). This will help cast a shadow between stones giving a solid dry stone look. The pattern will not line up to the millimetre, you will need off cuts and thin cut stones to fill the voids between the stone once the pattern has been laid.

Individual stones are held together with flexible webbing. Please specify if webbing isn't required when placing order.

Step 1:

- If your application requires corners, apply these first alternating the long & short return in opposite directions
- Cut on trim stones using a wet saw or angle grinder with a diamond blade
 attached
- Lay 1st layer of product at the base of wall in packaged re-occurring pattern
- Draw a straight line across the 1st layer of stones then cut
- Apply cut stone to wall in packaged re-occurring pattern

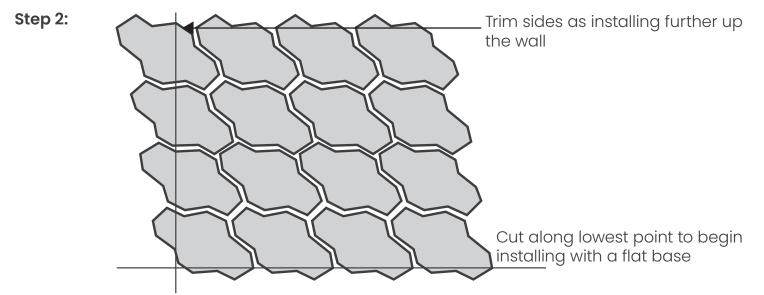

Installing with Dry Joint: Take time once the pattern is laid to cut thin stones to fill small gaps between the larger joints. This is very important, it will break up the pattern and provide the perfect hand crafted stone masonry look.

Installing with Mortar Joint: Sand and cement pointing mortar or tile grout can be used to fill the joints. One of the easiest and fastest ways to fill the joints is with a piping bag. Purchase your piping bag from Veneer Stone by calling (02) 4606 4907 or email admin@veneerstone.com.au.

Sealing: To retain the original fresh quarried look we suggest sealing the stone with VenSeal Ultra WB. If you would like the stone to mellow slightly and gain the European look after years of harsh weathering don't seal the product.

Contact Us -



15 Technology Drive, Appin, NSW 2560 Australia Head Office

2/26 Egan Rd, Dandenong, VIC 3175 Australia VIC Warehouse Darra Depot, Brisbane QLD Australia **QLD Warehouse**



/veneerstone 1300 984 572 (02) 4606 4907



/veneerstoneaustralia veneerstone.com.au